




## GETTING STARTED

Capture® consists of two main parts – the quick-release plate and the clip. Both are made from die-cast, post-machined powder coated aluminum. All parts are weatherproof and have a lifetime guarantee.

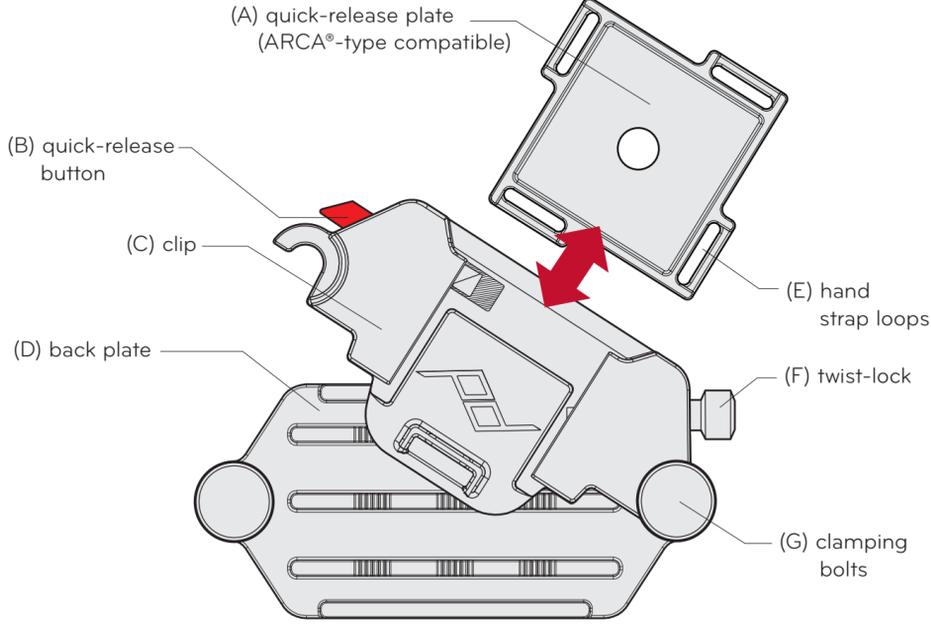


### 1 INSTALL THE PLATE

Remove the quick-release plate from the clip by pressing the quick-release button. Install the plate onto the tripod mount on the bottom of your camera. Screw the plate in with a coin or screwdriver, twisting it tight to ensure a solid connection.

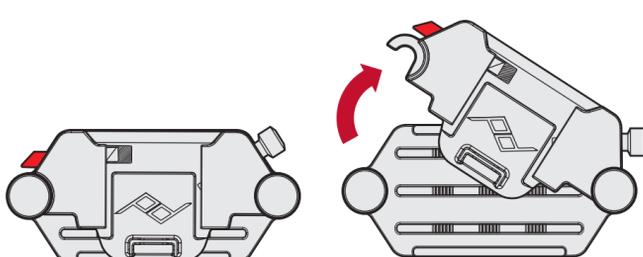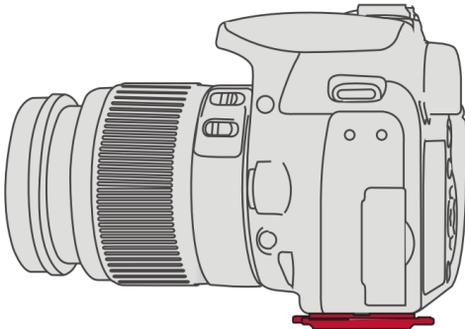


### 2 OPEN THE CLIP

The clip is made up of two plates that clamp together. Loosen the clamping bolts to unclamp the plates and swivel them apart.

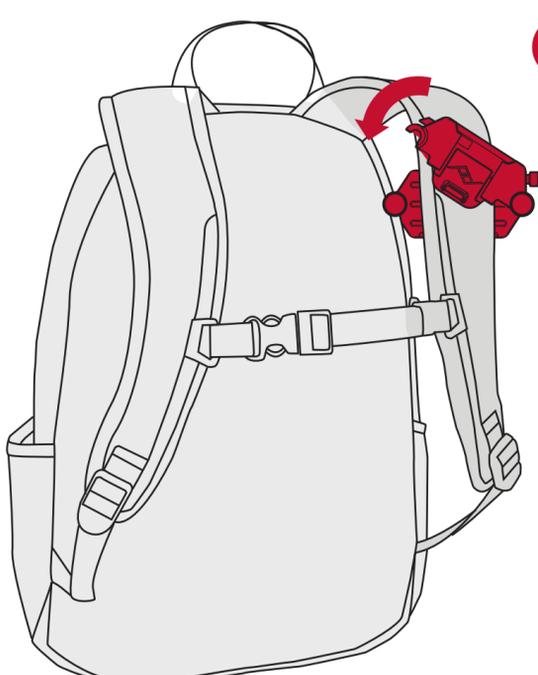

### 3 WEAR THE CLIP



**On a backpack:** the backplate sits behind your left backpack strap and the clip sits in front of it. To get Capture around thick shoulder straps you can loosen the clamping bolts all the way or remove them. Capture fits any strap up to 3 inches wide and 0.5 inches thick.

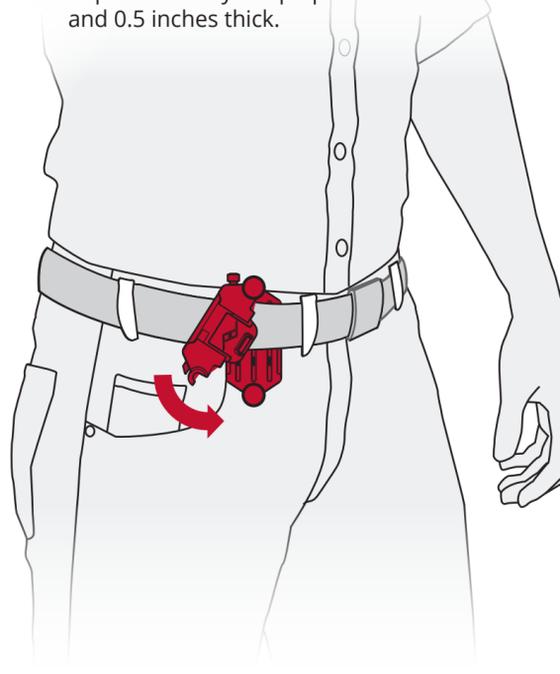

**On a belt:** loop the backplate behind your belt to the right of your buckle. Swivel the clip closed and hand-tighten the clamping bolts. Capture works best when the top clamping bolt rests on the top edge of your belt.



### 4 CLIP IN YOUR CAMERA

Lock your camera in by sliding the quick-release plate into the clip. Insert your camera with the lens facing down to maximize stability and comfort. You can slide your camera into the clip in any direction, allowing for easy lens changes.

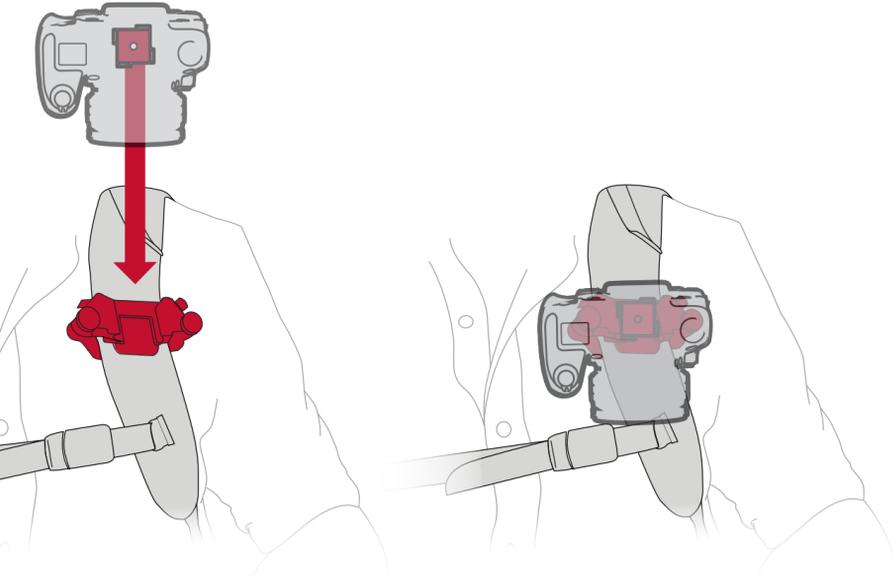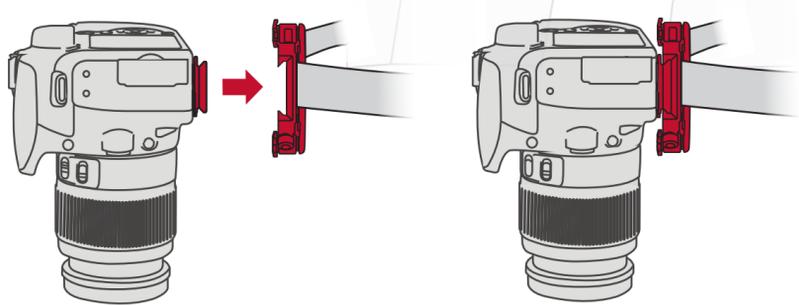

### 5 TAKE YOUR CAMERA EVERYWHERE

Capture holds your camera rigidly, which means you can do any physical activity with your DSLR. To access your camera simply press the quick-release button and slide your camera out.

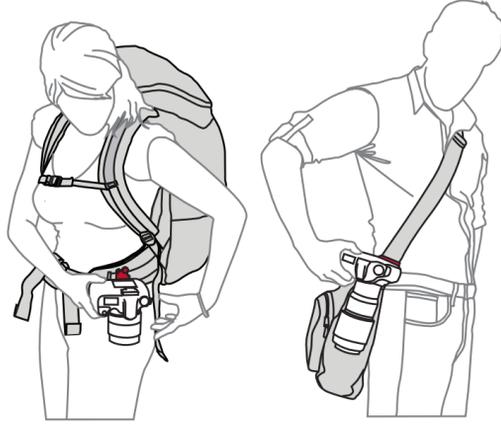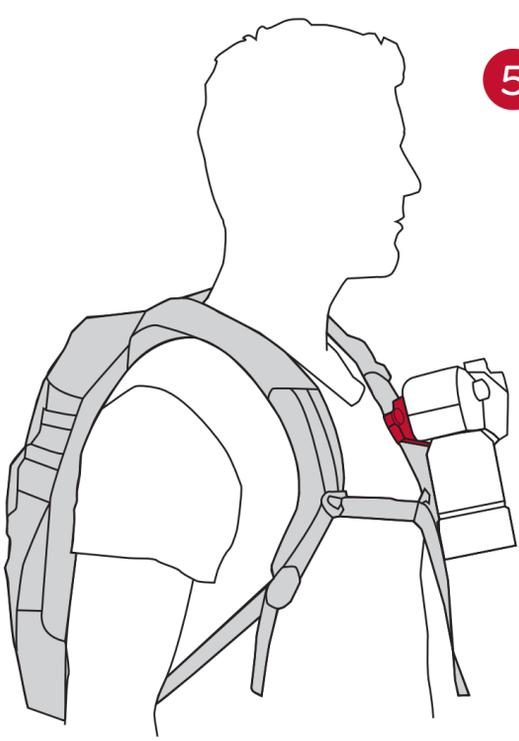

## USAGE TIPS FOR PROS

- ▶ Always ensure the quick-release plate is tightened securely to your camera using a screwdriver or coin.
- ▶ If you have a heavy body or large lens, try using Capture with a professional camera belt like the ThinkTank ProSpeed®
- ▶ On the backpack, wear Capture on your left shoulder with the quick-release button right to maximize ease of access.
- ▶ On the belt, wear Capture with the quick-release button facing down. This lets you grab your camera with one hand.
- ▶ If you have a long lens, wear Capture on the side of your hip. If you have a shorter lens, Capture works best toward the center of your belt or mounted to a backpack.
- ▶ Capture's standard quick-release plate fits in any ARCA-type tripod head. A Manfrotto-compatible plate will be available soon.
- ▶ For fast and easy lens changing, insert your camera into Capture with the lens facing sideways or up.

